


**CLAYTON OFF ROAD  
COR-1120110  
JEEP HIGH STEER SWAYBAR MOUNT (1984-2006, TJ/LJ/XJ/ZJ)**

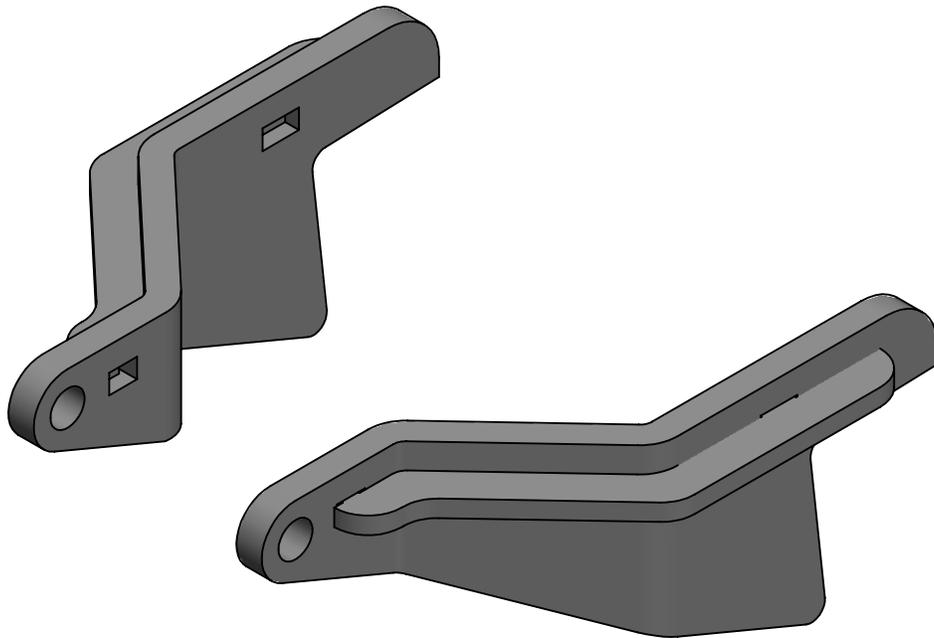


NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required. For more information please visit our website.

Refer to picture below.

Step 1: Remove axle from vehicle. (optional)


Step 2: Remove factory sway bar mounts.

Step 3: Grind inner knuckles smooth and clean for welding.

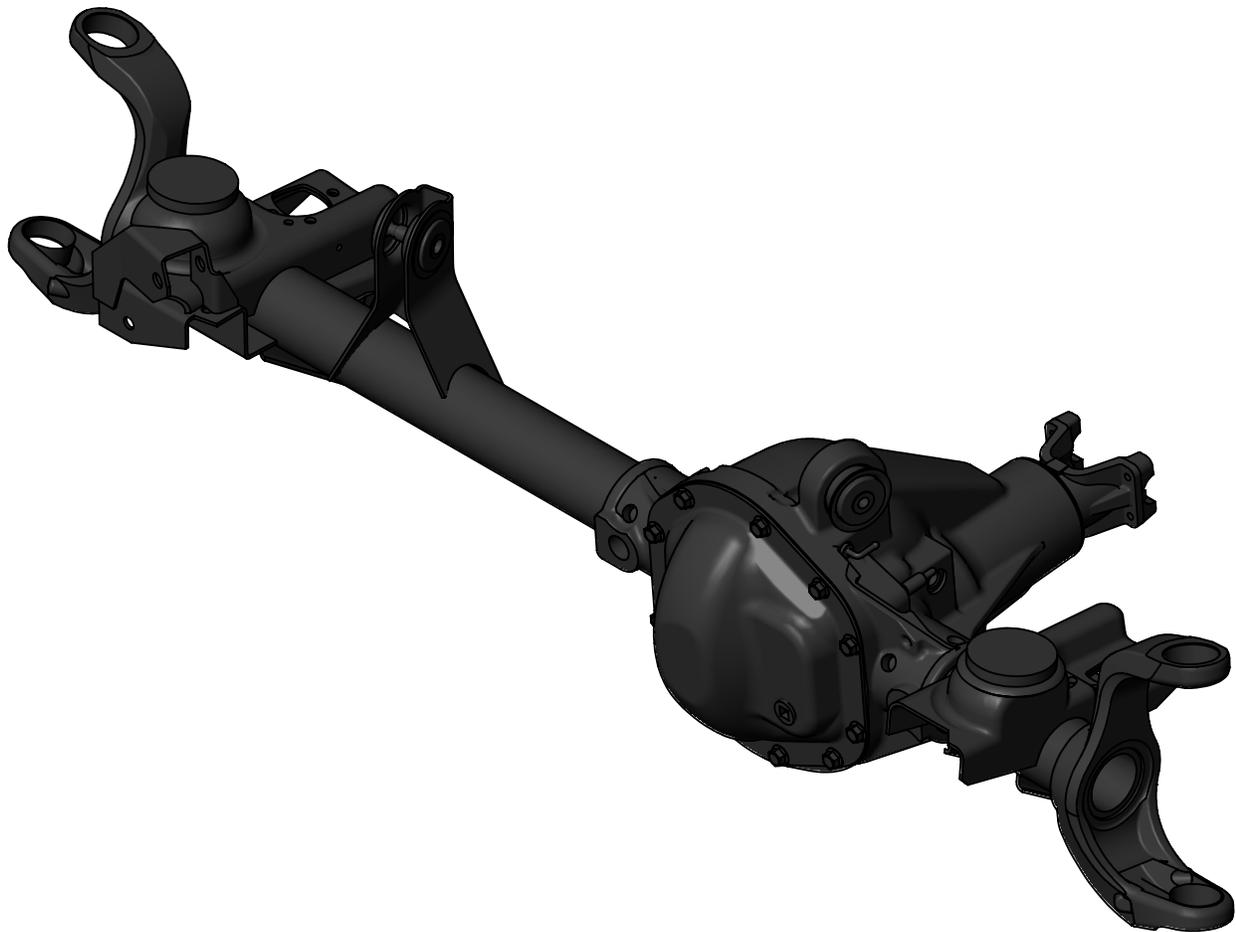

Refer to picture below.

Step 1: Make five 3/4" welds top and bottom on each mount top and bottom, as shown.

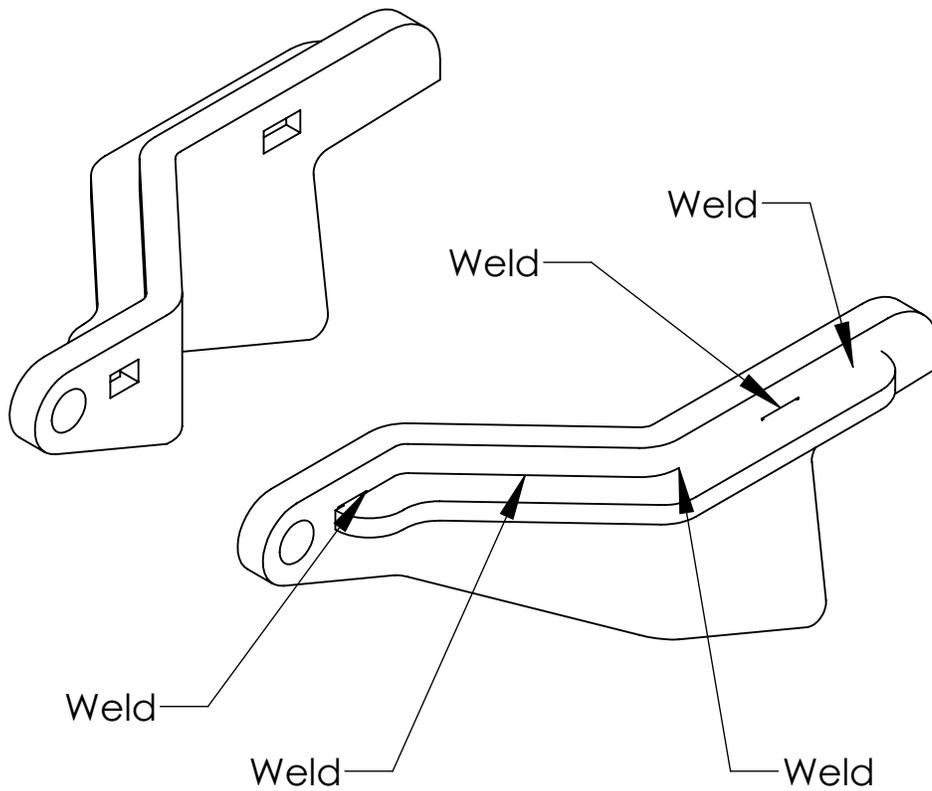

Weld

Refer to picture below and 3 drawing views for measurements.

Step 1: Weld weld sway bar gussets on to sway bar mount.

Step 2: Position new sway bar mounts on axle.

Step 3: Tack weld in place.

Step 4: Weld both sides of the mounts inside and out where possible.

Step 5: Paint axle.

Step 6: Install axle in vehicle. (If removed for install)

