


CLAYTON OFF ROAD  
COR-1100100  
JEEP LOWER POLY COIL BUCKET KIT (1984-2006, TJ/LJ/XJ/ZJ)

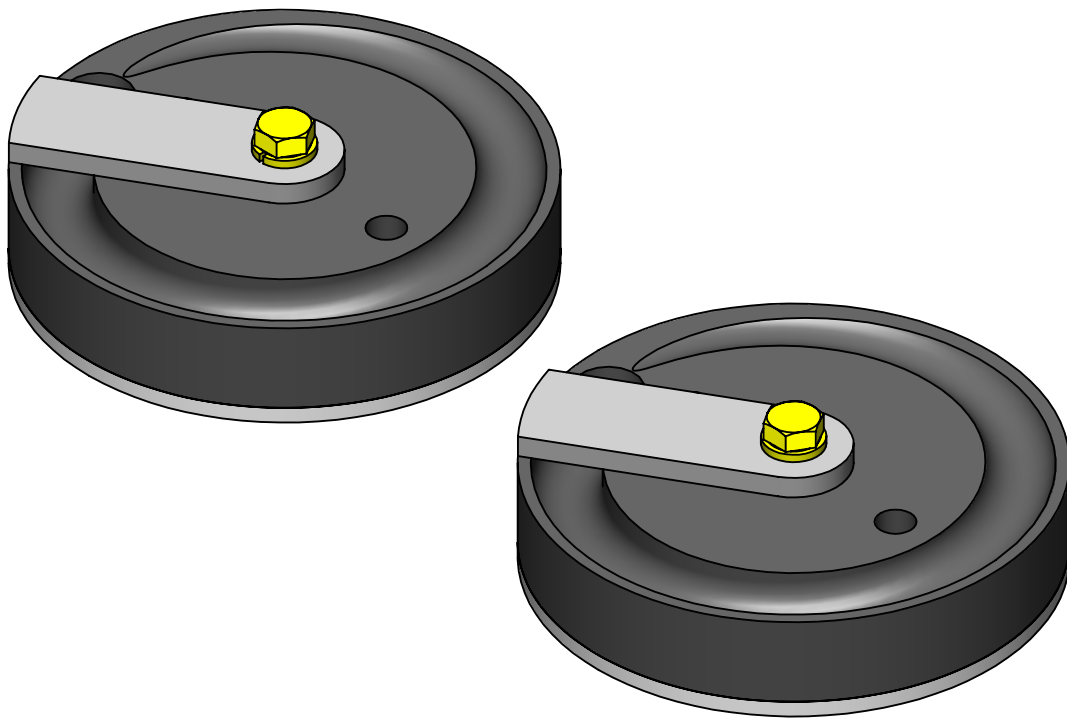

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required. For more information please visit our website.

- Step 1: Unbolt spring retainer and UHMW spring pad from bottom plate.
- Step 2: Bottom plate needs to be supported with more than just the axle tube.
- Step 3: Locate bottom plate on axle.
- Step 4: Fabricate additional bracing to support bottom plate.
- Step 4: Weld bottom plate on axle, three one inch welds around the edge is enough.
- Step 5: Paint axle.
- Step 6: Install UHMW spring pad and spring retainer.