


CLAYTON OFF ROAD  
COR-1310102  
JEEP GLADIATOR REAR BRAKE LINES (2020 & UP, JT)

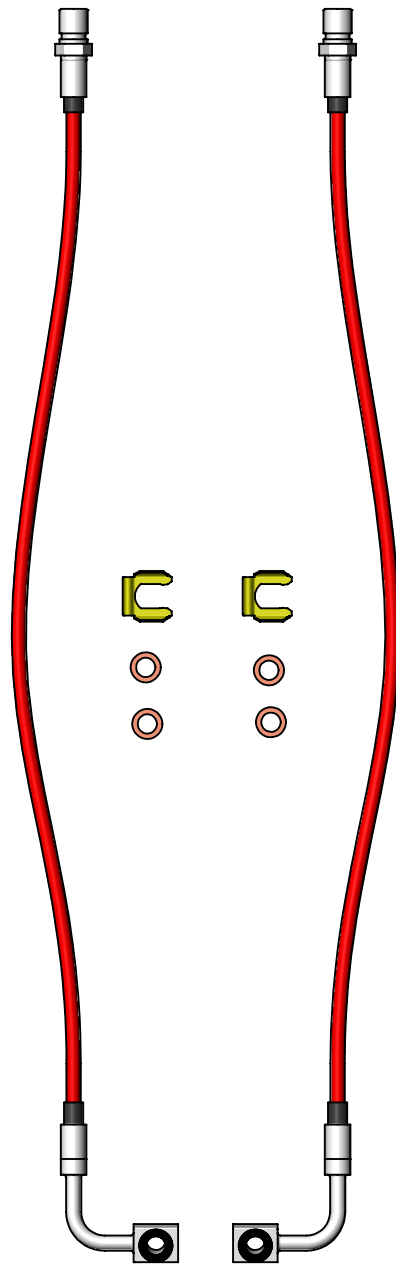

NOTES: This product may require general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required.

For more information please visit our website.

- Step 1: Remove banjo bolt on caliper.
- Step 2: Remove hard line from brake line at frame.
- Step 3: Remove brake line retaining clip.
- Step 4: Remove old brake line.
- Step 5: Install new extended brake line at frame with new retaining clip.
- Step 6: Connect hard line to new extended brake line and tighten nut.
- Step 7: Connect extended brake line at caliper using banjo bolt and new washers.
- Step 8: Tighten banjo bolt.
- Step 9: Repeat steps 1 through 8 on other side.
- Step 10: Bleed brake lines using bleeder valve on the calipers.
- Step 11: Top off brake fluid.
- Step 12: Start vehicle and apply brakes.
- Step 13: Check for leaks.