


CLAYTON OFF ROAD
COR-4104110
JEEP GRAND CHEROKEE TRANSFER CASE SKID PLATE (1993-1998, ZJ)

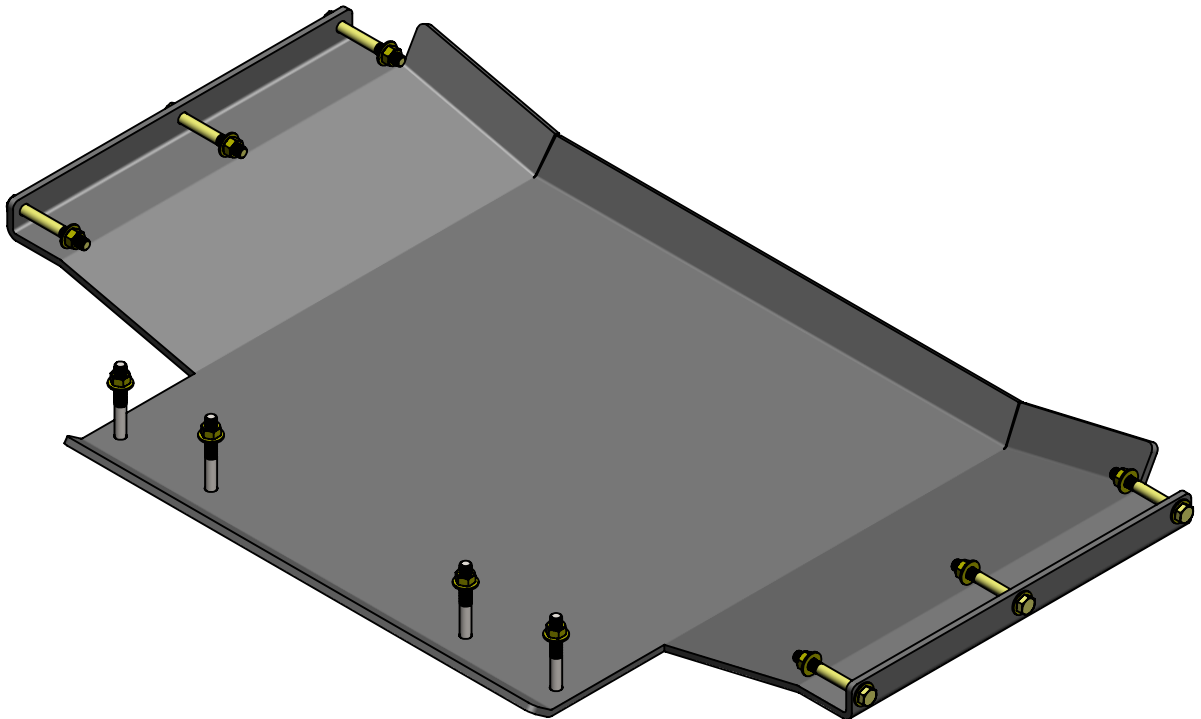

NOTES: This product requires general welding, fabrication and automotive mechanic skills. Welding should only be done by a competent welder. Clayton Off Road implies no guarantees or warranties and is not liable for improper installation. Some grinding and fitment may be required when installing this product. Every vehicle varies slightly and some fabrication may be required.

For more information please visit our web site.

Refer to drawing views.

Step 1: Install one of these part numbers COR- 2104310 or COR-2104313 or COR-2104610 or COR-2106313 3 piece cross member.

Step 2: Install part number COR-2204110 rear frame brackets.

Step 3: Install part number COR-2204210 uni-body frame rails.

Step 4: Place skid plate on to vehicle.

Step 5: Check hole alignment. Mounting holes may need to be drilled out slightly.

Step 6: Remove skid plate.

Step 7: Paint skid plate.

Step 8: Install skid plate.

Note: It is possible to use this skid plate without part number COR-2204110.

